


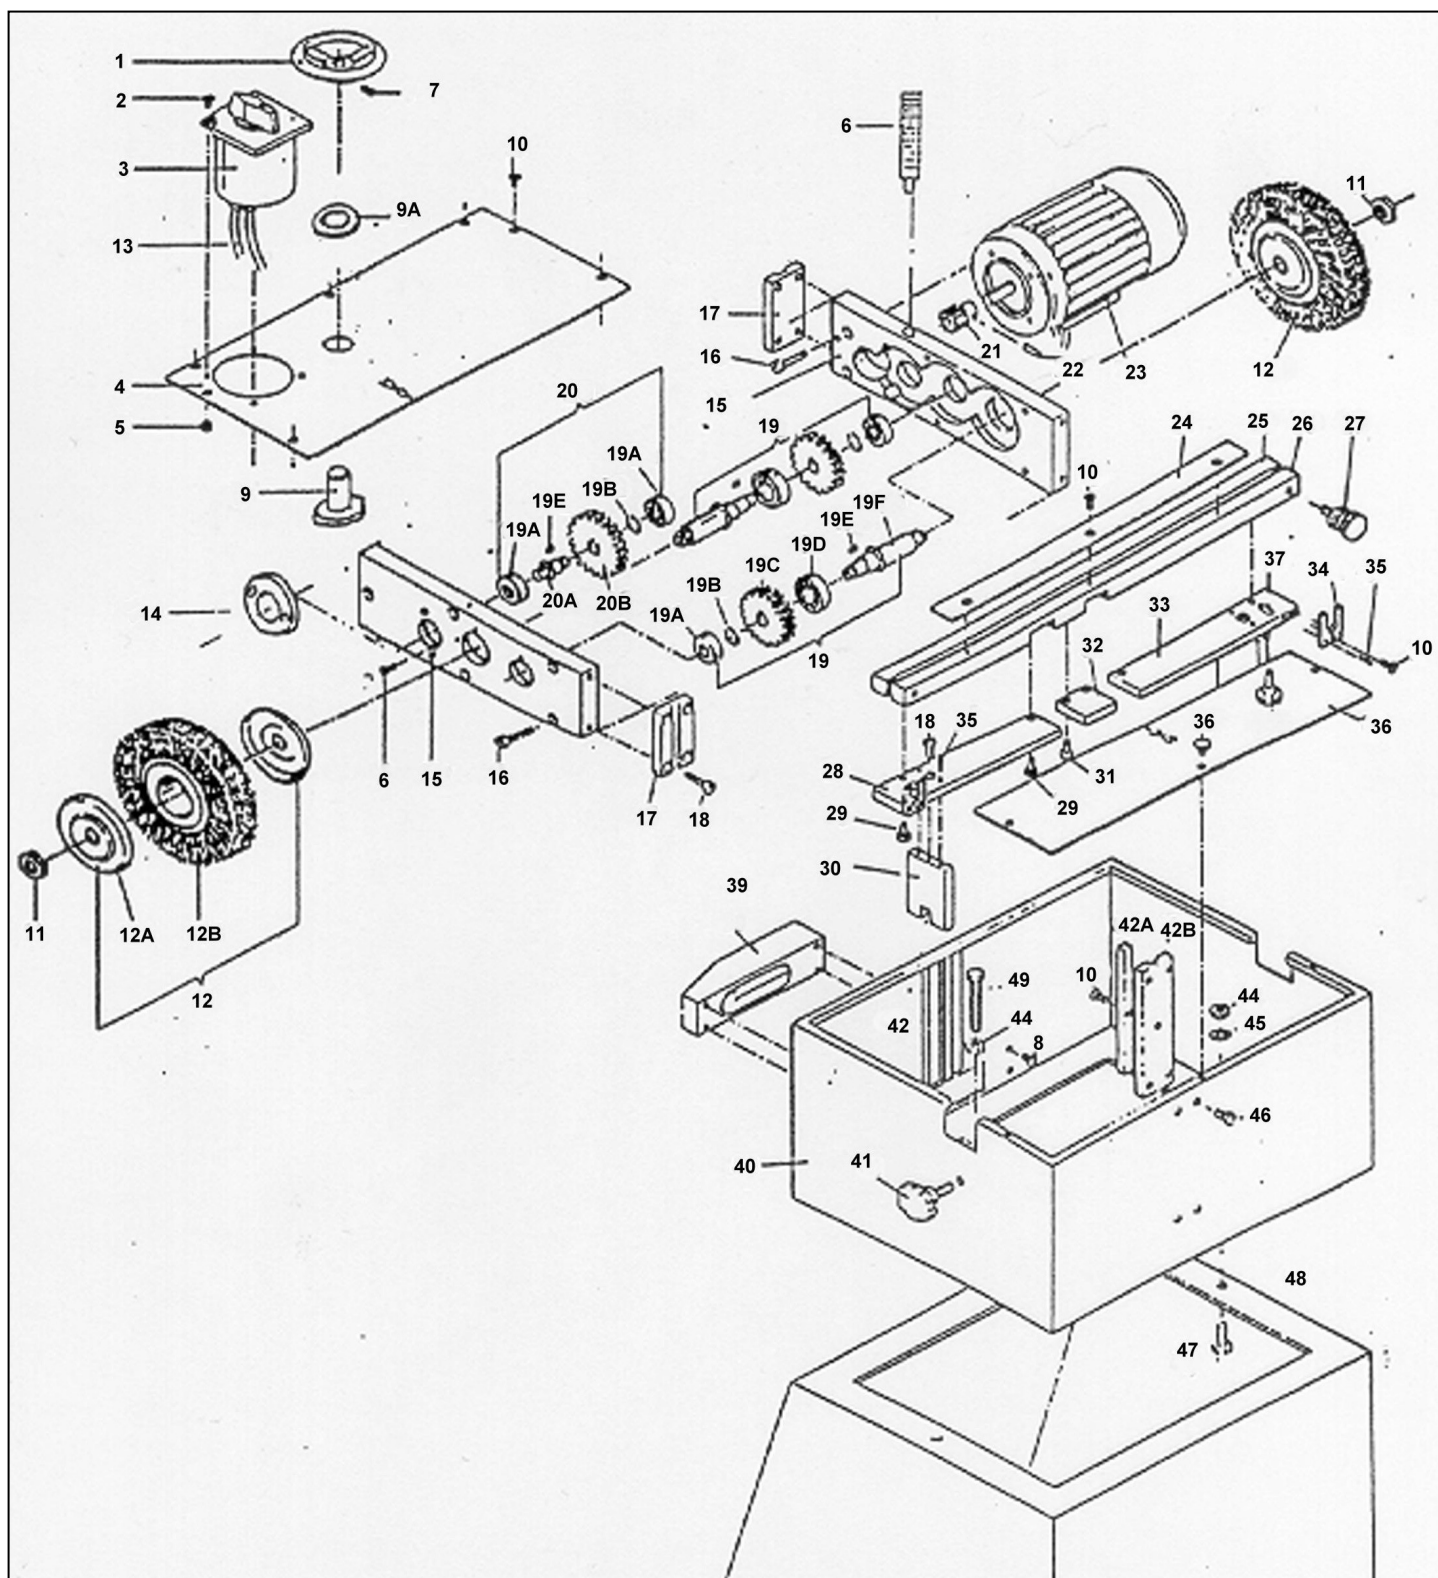

380 V version

Pos.	Art-no.	description	Pos.	Art-no.	description
1	54001	hand wheel	20	54020	countershaft complete
2	54002	screw	20A	54020A	countershaft
3	54003	Switch	20B	54020B	gear wheel
5	54005	nut	21	54021	motor bevel
6	54006	threat	22	54022	screw for motor bevel of ROLEI BE5
9	54009	adjustment nut	23	54023	motor 380 volts
10	54010	knurled screw	24	54024	protection rail
11	54011	nut	25/26	54025	guidance rail 700 mm (part 25 + 26)
12A	54012A	clamping cover	27	54027	adjustment screw
13	54013	cable	28/32/33	54028	guidance rail 700 mm
14	54014	sealing cover	30	54030	fixing plate
15	54015	gear box	34	54034	adjustment bracket
16	54016	screw	36	54036	knurled screw 4x8
17	54017	guide	37	54037	knurled screw 6x20
18	54018	screw	41	54041	hand grip screw 8x20
19	54019	driveshaft complete	42	54042	gear guide
19A	54019A	bearing	43	54043	cable connection
19B	54019B	circlip	50	54050	complete gear with drive cover and gear wheels with motor
19C	54019C	gear wheel	51	54051	complete gear with drive cover and gear wheels without motor
19D	54019D	bearing	52	54052	1 set of crown wheels 2x19C/1x20B/1x21
19E	54019E	fitting key	53	54053	1 set ball bearings 4x19A/2x17D
19F	54019F	driveshaft	54	54054	cable guidance

Spare flap wheels

12B	37040	ROLEI spare flap wheel 165 x 30 mm grit 40	12B	37080	ROLEI spare flap wheel 165 x 30 mm grit 80
12B	37060	ROLEI spare flap wheel 165 x 30 mm grit 60	12B	37120	ROLEI spare flap wheel 165 x 30 mm grit 120

Attention: Use only Original EISENBLÄTTER spare flap wheels because the polyester fibre residues of spare flap wheels with polyester material can seriously damage the bearing bush of the gear!

A warranty claim is only possible by using the Original Eisenblätter spare flap wheels!